



Learning Spaces Global



## 14648 Market Station Assembly Instructions




Push 2x short bolts through bottom brackets and bottom of canopy uprights.



Tighten bolts into insert nuts with 2x Allan keys provided. Repeat steps 1 and 2 on opposite end.



Insert 2x insert nuts into the inside top of canopy uprights as shown.

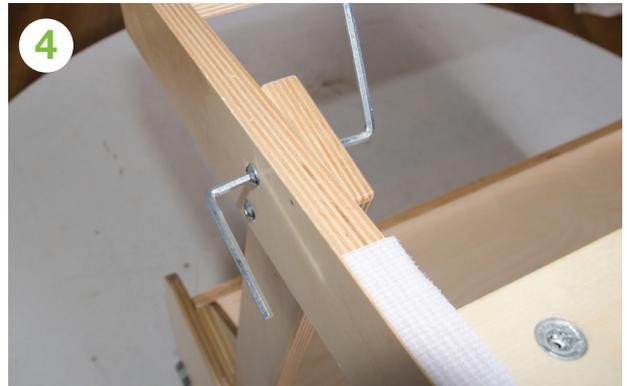

Tighten long bolts into insert nuts with 2x Allan keys provided. Repeat steps 1 and 2 on opposite end.



Unroll canopy fabric and velcro onto canopy frame as shown above and completed in step 6.

